


The MimioTeach™ interactive whiteboard easily turns any dry erase whiteboard into an interactive system.




Dock the stylus on the side of the MimioTeach bar for recharging when not in use. Status light will turn solid green during charging.\*

\*An amber light on the stylus indicates that it must be recharged immediately.

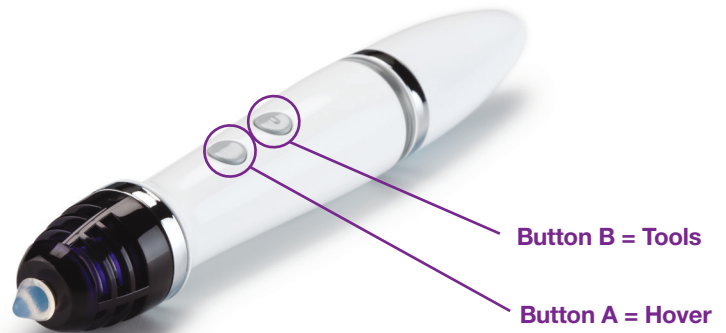

Depressing tip, while holding down Button A, creates Right-Click.

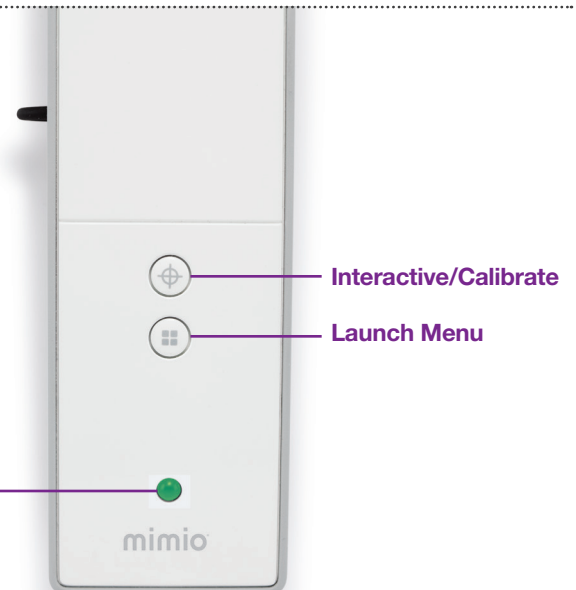

**Status Light**

**Off:** Not receiving power; USB/power cable is not connected, or MimioTeach is turned off.

**Solid Green:** MimioTeach is connected and receiving power; MimioStudio™ software is running.

**Flashing Green:** MimioTeach is connected and receiving power; MimioStudio software is not running.

**Solid Amber:** MimioTeach is connected and receiving power; MimioTeach is searching for connection to the MimioHub™ receiver.